

"Your Single Source for ALL Your Loading Dock Needs"

PERMA

PIT

INSTALLATION INSTRUCTIONS

NOTE: CHECK SHIPPING CONTAINERS BEFORE RELEASING CARRIER. NOTIFY CARRIER IMMEDIATELY UPON DISCOVERING ANY CONCEALED DAMAGE.

WARNING: Do not install this product unless you have read and understand the warnings and installation instructions contained in the manual. Failure to do so could result in serious injury or death.



Sales@PermaTechInc.com 363 Hamburg Street, Buffalo,NY 14204 WWW.PermaTechInc.Com Toll Free:800-362-7325Local:716-854-0707Fax:716-854-0774

INSTALLATION INSTRUCTIONS

PERMA PIT

1. Determine pit dimensions (A, B, C) from leveler manufacturer specifications.

CHECK MEASUREMENTS OF PERMA PIT TO SEE THAT IT ADHERES TO THEIR SPECIFICATION BEFORE INSTALLATION!

- 2. Leave opening in foundation wall 12" wider than the finished pit width when pouring foundation.
- 3. The front curb angle should be set in the center of this opening when the foundation is poured. It is recommended that the pit floor be poured at the same time or at least before the dock floor is poured. Check pit depth to leveler manufacturer specification to determine position of front curb angle. (DIM. C)
- 4. Pour the pit floor 6" wider than the finished pit width (DIM. A) and 3" longer than the finished length including the foundation wall (DIM. B).
- 5. Set up Perma Pit; the sides will bolt to the back member which has three holes on each side of it. The 3" angle will be at the top on all three members and to the outside of the pit. Top of angles should be level with dock floor. The side members must be placed flush with the outside face of foundation wall.
- 6. Make sure the Perma Pit is square. Place a 2x4 or 2x6 brace at the middle top of the Perma Pit, also at the front top. Nail some 2x4 cleats to the floor of the pit at the bottom of the Perma Pit to steady the pit when pouring concrete. (You can also drill holes in the bottom flange and nail this to the pit floor).
- 7. Bulk head the front of the Perma Pit on each side.
- 8. Pour concrete around the Perma Pit.
- 9. Remove bracing when concrete has hardened.
 - **CAUTION:** Do not use more concrete than what is normal for pit walls. Do not pour concrete too fast or it may cause bowing in the Perma Pit walls.



LIMITED PRODUCT WARRANTY

Perma Tech, Inc. warrants the material and workmanship in any product manufactured by Perma Tech, Inc. for a period of one year from the date of shipment to customer if properly installed, maintained and used. This limited warranty shall not apply in the event of misuse or modification by customer or to materials not manufactured and installed by Perma Tech, Inc.

In the event of any defects covered by this warranty, Perma Tech, Inc. will remedy such defects by repairing or replacing at its expense any defective products or, at its option, refunding the original purchase price excluding installation, freight and tax. This shall be customer's exclusive remedy for all claims whether based on warranty, contract, negligence, strict liability or other legal theory.

Written notice of any claim must be made within the warranty period by first class mail or personal delivery to a suitable person at Perma Tech's office at 363 Hamburg Street, Buffalo, New York 14204. Notice of delivery by e-mail or fax is not acceptable.

PERMA TECH, INC. EXPRESSLY DISCLAIMS AND CUSTOMER WAIVES ALL IMPLIED WARRANTIES INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PERMA TECH, INC. SHALL NOT IN ANY EVENT BE LIABLE FOR AND CUSTOMER WAIVES ANY INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES OF ANY KIND TO CUSTOMER OR ANY THIRD PARTY, INCLUDING WITHOUT LIMITATION DAMAGES FOR LOST PROFITS, EVEN IF ADVISED OF SAME.