

LIMITED PRODUCT WARRANTY

Perma Tech, Inc. warrants the material and workmanship in any product manufactured by Perma Tech, Inc. for a period of one year from the date of shipment to customer if properly installed, maintained and used. This limited warranty shall not apply in the event of misuse or modification by customer or to materials not manufactured and installed by Perma Tech, Inc.

In the event of any defects covered by this warranty, Perma Tech, Inc. will remedy such defects by repairing or replacing at its expense any defective products or, at its option, refunding the original purchase price excluding installation, freight and tax. This shall be customer's exclusive remedy for all claims whether based on warranty, contract, negligence, strict liability or other legal theory.

Written notice of any claim must be made within the warranty period by first class mail or personal delivery to a suitable person at Perma Tech's office at 363 Hamburg Street, Buffalo, New York 14204. Notice of delivery by e-mail or fax is not acceptable.

PERMA TECH, INC. EXPRESSLY DISCLAIMS AND CUSTOMER WAIVES ALL IMPLIED WARRANTIES INCLUDING WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. PERMA TECH, INC. SHALL NOT IN ANY EVENT BE LIABLE FOR AND CUSTOMER WAIVES ANY INCIDENTAL, CONSEQUENTIAL OR PUNITIVE DAMAGES OF ANY KIND TO CUSTOMER OR ANY THIRD PARTY, INCLUDING WITHOUT LIMITATION DAMAGES FOR LOST PROFITS, EVEN IF ADVISED OF SAME.



PERMA TECH, INC.

363 HAMBURG STREET
BUFFALO, NEW YORK 14204

PHONE: (716) 854-0707

FAX: (716) 854-0774

1-800-362-7325

WWW.PERMATECHINC.COM

PERMA RAIL SHELTER

**MECHANICAL
4-SIDED**

INSTALLATION INSTRUCTIONS

NOTE:

CHECK SHIPPING CONTAINERS BEFORE RELEASING CARRIER.
NOTIFY CARRIER IMMEDIATELY UPON DISCOVERING ANY CONCEALED DAMAGE.

WARNING

DO NOT INSTALL THIS PRODUCT UNLESS YOU READ AND UNDERSTAND THE WARNINGS AND INSTALLATION INSTRUCTIONS CONTAINED IN THIS MANUAL.
FAILURE TO DO SO COULD RESULT IN SERIOUS INJURY OR DEATH.

INSTALLATION INSTRUCTIONS

MECHANICAL PERMA RAIL SHELTER (4-SIDED)

1. Find the centerline of the door opening and the top frame. Use the top frame to mark the unit width on the wall, top & bottom. Strike a line 12" below dock level. (Standard units are mounted 12" below dock level)

UNIT HEIGHT

12"

USE TOP FRAME TO MARK WIDTH

UNIT WIDTH

2. Install the bottom of bottom frame 12" below dock, centered on door opening.

3. The side frames are marked "TOP LEFT" and "TOP RIGHT." Install the side frames using the marks on the wall to align the outside edges and 12" below dock. Make sure side frames are plumb.

HEAD FRAME

4. Set the head frame on the top of the side frames and attach to building.


5. Insert the legs of the top and bottom steel frames into the top and bottom of the side steel frames. Bolt the bottom frame.

6. Let the steel frame support the shelter cover and nail the hemmed back edge to the wooden frame.

7. Attach the front edge of the shelter cover to the steel frame by wrapping the fabric around the frame (with the foam edge to the front) and bolt through the grommets.

FOAM EDGE

USE BOLTS TO ATTACH CURTAIN TO STEEL FRAMES

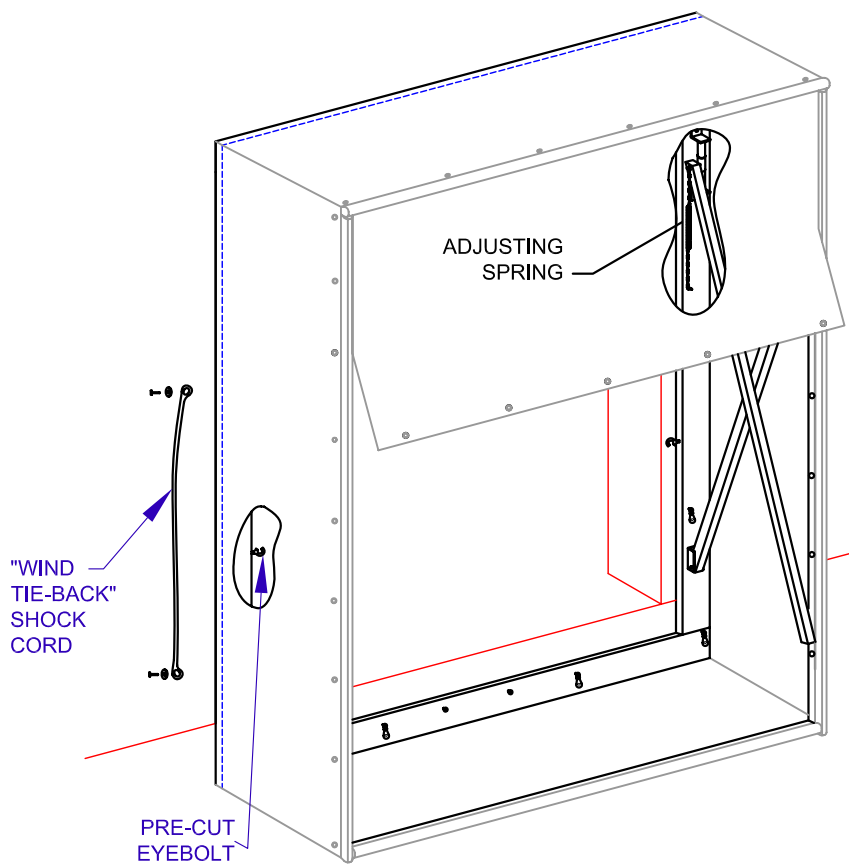

8. Adjust unit tension with springs and chain (just enough tension to keep unit firmly extended).


9. Nail molding strips over fabric and caulk around all three sides.

10. Attach side curtain "wind tie-backs" to the wood frame on the outside of the unit using nails and fender washers. When unit is retracted, the cord is stretched around the curtain to the eyebolt inside the unit.

11. String rope per diagram (below).

NOTE: WHEN NOT IN USE, THIS UNIT MUST BE RETRACTED.

STRINGING DIAGRAM

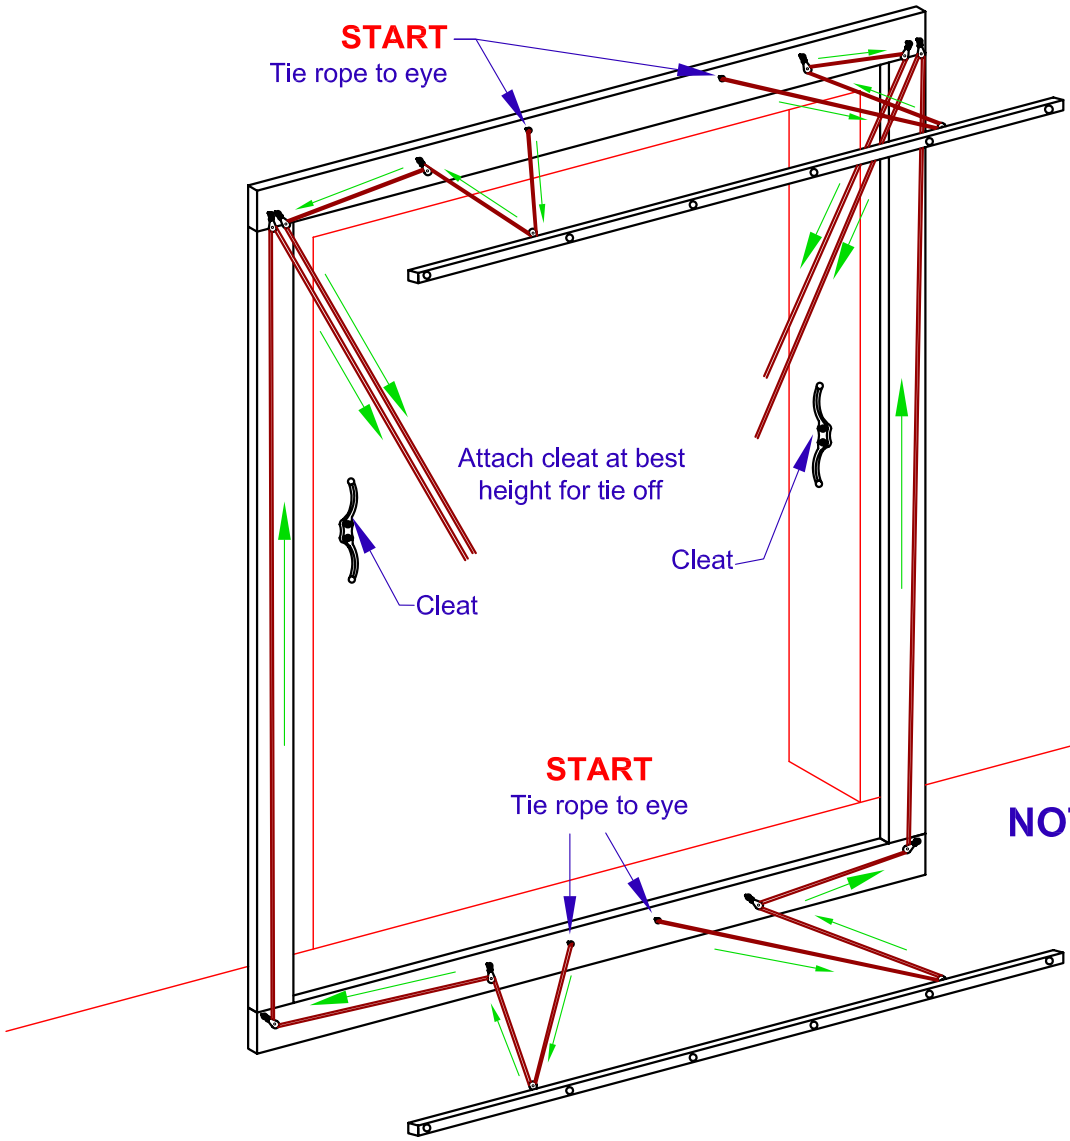

NOTE: Rope is sent in one continuous length. Cut 18" below cleat for each run.